

New Zealand – Self Contained

Chill'd Sundaze Gen 1



Vehicle Manual

Images within this manual are for illustrative purposes only. Actual vehicle, model, and exterior paint colors may vary.



Sundaze – Gen1 vehicle **MANUAL**

Contents

Description of Keys	3
Fire Extinguisher	4
Starting the Vehicle	5
Windows & Vents	6
240-Volt electrical system	7
12-volt electrical system	8
Freshwater tank and water access	9
Greywater Tank	10
Water Pump	11
Shower	12
Toilet	13
Tap & Sink	14
Gas Stove	15
Fridge	16
Lights	17
Dining Table	18
Beds	19
Storage	20
Fuel	21
Power Points	22
Tips & Tricks	23
Jack & Spare Tyre	24
Additional Information	25
Dash warning lights	26



Sundaze – Gen1 vehicle **MANUAL**

Description of Keys



IGNITION KEY:

Use this key to start your vehicle



FRESH WATER KEY:

Use this key to lock/unlock the freshwater tank cap



GAS LOCKER KEY:

Use this key to lock/unlock the gas locker



TOILET CASSETTE KEY:

Use to lock/unlock the Toilet Cassette area.



Sundaze – Gen1 vehicle **MANUAL**

Fire Extinguisher



FIRE EXTINGUISHER

Each vehicle is equipped with a dry chemical fire extinguisher, selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements).

To deploy the extinguisher effectively, grasp the ring situated at the top of the bottle, direct the nozzle towards the base of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

* A fire extinguisher is attached to the interior of the vehicle.



Sundaze – Gen1 vehicle **MANUAL**

Starting the Vehicle

Gear stick in parking mode



Gearstick must be in PARK and your foot on the pedal for the vehicle to start.

The dashboard will display a 'P' indicating the vehicle is in Park.

Start the vehicle using the ignition key.

Gear stick in driving mode



With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating the vehicle is in Drive.



To disengage the handbrake, grip the handle and feel for the button under your finger. Squeeze the button, then turn the handle in an anticlockwise direction.

The handle will be released and can be pushed away from you, towards the floor.

To engage the handbrake, grip the handle and pull it towards you.

Please note: The handbrake is located below the gear stick.



Sundaze – Gen1 vehicle **MANUAL**

Windows & Vents

WINDOWS:

To use the window:

1. Find the latch and locking mechanism in the centre of the window. To open the windows, push the window to the right.
2. Slide the latch to the unlock position – this allows the window to move freely.



VENTS:

To use the vent:

1. The vent is in the toilet, opposite the shower. It operates automatically, so there's no need to turn it on or off.





Sundaze – Gen1 vehicle **MANUAL**

240-Volt electrical system

The vehicle is equipped with a 240-volt electrical system which can be used to run the power points and recharge the domestic battery. The external plug is located on the driver's side of the vehicle.

Electrical appliances will only work when the van is plugged into an external power source.

To use the 240-volt electrical system:

1. Connect the vehicles 15AMP electrical cord to a 240-volt external power source.

Please Note: It is recommended that the vehicle is plugged into power every 2nd night to keep the domestic battery charged.





Sundaze – Gen1 vehicle **MANUAL**

12-volt electrical system

Your vehicle is equipped with a 12-volt battery which is located under the bed. This powers the water pump, fridge and interior lights. The domestic battery is charged by the alternator when the vehicle is being driven and the 240-volt system when it is plugged into mains power source. The 12-volt electrical panel is located at the back, right side of the vehicle.





Sundaze – Gen1 vehicle **MANUAL**

Freshwater tank and water access



On board the vehicle is a freshwater system consisting of a water pump and freshwater tank.

The water tank has an 80L capacity and is located on the passenger side of the vehicle. This water is for the sink, shower and toilet flush.

To fill the freshwater tank:

1. Flip open the compartment that says "Fresh Water Only"
2. Place the end of the water hose into the tank and connect the hose to the tap to fill the vehicle with fresh water.



Note: Do not use too much pressure as the tank must be vented when filling. In the event of an air bubble, simply remove the hose, reinsert and fill slowly again.

The tank is full when the water starts to overflow from the water inlet.

Please note: The water from the vehicle tap is not suitable for drinking.



Sundaze – Gen1 vehicle **MANUAL**

Greywater Tank

The greywater holding tank collects wastewater from the kitchen, bathroom sink and shower.

Is it not uncommon for the greywater level indicator to give an inaccurate reading. It may show 100% even if it is empty. We recommend emptying your greywater tank as regularly as possible.

To empty the greywater tank:

1. Collect the greywater hose from the storage compartment.
2. Connect the hose to the outlet. Make sure it is firmly attached.
3. Place the other end of the hose into a dump station disposal opening.
4. Open the tank but pulling the lever located at the base of the rear cabinet OR on the rear undercarriage on the passenger side of the vehicle and wait for it to empty.
5. Once the grey water is empty, close the lever and remove the hose. Stow the hose away in the storage compartment.





Sundaze – Gen1 vehicle **MANUAL**

Water Pump

To use the water pump:

1. Ensure there is water in your freshwater tank
2. On the 12-volt panel, turn the water pump on. You will hear the pump quietly start up. The pump operates as part of the 12-volt system. (You must have this button on to operate the kitchen tap)
3. When you are not using the water pump, ensure it is turned off.



Please note: Avoid running the pump when the water tank is empty. Operating the pump continuously with no water can cause damage.

Caution: Do not drink the water from the tap unless it's boiled first.



Sundaze – Gen1 vehicle **MANUAL**

Shower

The shower relies on the freshwater tank for its water supply.

To use the shower:

1. The water pump must be turned on to pressurize the water system, to turn the water pump on flick the switch at the control panel, inside the vehicle.
2. To warm the water, leave the engine running for at least 30 minutes before the shower.





Sundaze – Gen1 vehicle MANUAL

Toilet

To use the Toilet:

1. The toilet has a manual flush mechanism. Use the pump or lever to flush water into the bowl. Use the toilet as you would use a regular toilet.

Note: On the toilet bowl there is a grey lever (either on the right-hand side or in the middle) that you need to twist in order to open the trapdoor into the cassette. Twist it closed after use.



To empty the toilet:

1. Open the toilet cassette door but pressing both buttons on the door at the same time. This is on the exterior of the vehicle on the right side.
2. Lift the yellow or blue tab and remove the cassette
3. Twist off the yellow/blue cap on the rotating arm and empty waste into a dump station
4. Once the cassette is empty, rinse out with water then slide the cassette back into place
5. Make sure the lever by the toilet is properly closed





Sundaze – Gen1 vehicle **MANUAL**

Tap & Sink

The vehicle comes equipped with a pressurized water system

To use the tap:

1. Turn on the water pump using the button on the control panel
2. You will now be able to turn the tap on





Sundaze – Gen1 vehicle **MANUAL**

Gas Stove

The vehicle is equipped with a gas stove.

Please note: This stove is not designed for use with pans larger than 20cm.

To use the gas cooker:

1. You will need to unlock the LPG storage area located outside the vehicle. Turn the gas valve anticlockwise to open it. Turn it slowly and carefully. You should feel the valve loosen as you turn
2. Press the ignition button on the stove. Turn the knob to allow the gas to flow, whilst pressing the ignition button until the flames light
3. Hold the button for a few seconds, then release
4. Adjust the flame. Turn to your desired level.

CAUTION: Always have the vehicle well-ventilated while using the gas cooker.





Sundaze – Gen1 vehicle **MANUAL**

Fridge

The fridge in your vehicle operates via the 12-volt and 240-volt system.

To use the fridge:

1. Turn on the fridge switch on your control panel.
2. Check that the blue light is illuminated on the fridge, above the power button – this indicates the fridge is on and working.
3. The thermostat can be found inside the fridge. The optimal range for the fridge is halfway between the minimum and maximum temperature settings.

Note: If the vehicle is NOT plugged into the mains and is left stationary for an extended period, leaving the fridge on could drain the domestic battery.





Sundaze – Gen1 vehicle **MANUAL**

Lights

The vehicle is equipped with cabin lights

Cabin Lights:

To operate the cabin lights, turn on the light switch at the main control panel. These lights are touch sensitive so you can tap them to change the brightness.



Outside Light:

To operate the outside light, flick the orange button located above the sliding entry door. It will illuminate.





Sundaze – Gen1 vehicle **MANUAL**

Dining Table

The vehicle is equipped with an inside dining table, located on the right side of the vehicle. The table comes in two parts: the tabletop and a removable leg

To set up the table:

1. Place the table mount into the mounting brackets



2. Place the tabletop on the leg





Sundaze – Gen1 vehicle **MANUAL**

Beds

The vehicle is equipped with 2 double beds.

To use the bottom bed:

1. Gently slide the bed frame out of its storage position
2. Lay the mattress onto the frame. Ensure it fits well and is evenly distributed across the frame.
3. If needed, adjust the front seats to better accommodate the mattress squabs
4. Use the linen provided to cover the bed



To use the Top bed:

1. Unclip both hooks to release the bed net
2. Pull the middle tab to slide the mattress out
3. The frame is the correct size to fit in the designated space so it lays flat and secure.
4. To access the top bed, place your foot on the step alongside the window



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Sundaze – Gen1 vehicle **MANUAL**

Storage

The vehicle has a dedicated storage area located under the bottom bed



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Sundaze – Gen1 vehicle **MANUAL**

Fuel

When operating the vehicle, it is essential to use Unleaded 91 Petrol



If you put any other fuel (diesel) or water, DO NOT drive the vehicle. Contact JUCY roadside assistance immediately.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Sundaze – Gen1 vehicle **MANUAL**

Power Points

The vehicle has 2 power points located at the back of the vehicle. These will only work when the vehicle is plugged into an external 240-volt power supply





Sundaze – Gen1 vehicle **MANUAL**

Tips & Tricks

- A trick when re-filling the freshwater tank is to turn on the water pump and open the tap while you have the green hose filling up the tank. You can turn it off once a steady stream of water starts to flow through the tap – this make sure there are no air bubbles in the pump or pipes.
- Whenever you get the chance to refill and empty your water tanks, take it!
- Make sure the grey water tank is emptied before refilling the freshwater tank
- The water cylinder heats as you are driving (approx. 5-6hours) or when you are plugged into an external power source.
- Look for LPG 'refill' stations rather than bottle swaps. A lot of bottle swaps do not carry the 2kg bottles used in our campers
- The top bed is often warmer than the bottom bed
- On hills, use lower gear to help you. This means you are not constantly using the brakes when going downhill and means you can get up hills faster.



Sundaze – Gen1 vehicle **MANUAL**

Jack & Spare Tyre

In the event of a puncture, please use the tools located inside the compartment, located by the sliding door.



The spare tyre can be found on the front of the vehicle, however, in some vehicles, it may be located on the back.

To access the spare tyre on the front, remove the wheel cover then use the wheel brace to remove the wheel nuts and release and remove the spare wheel.

To access the spare tyre located under the rear of the van, use the wheel brace as per the picture below. Unscrew the bolt located on the inside rear of the vehicle on the floor anticlockwise.

Be careful when as the tyre can heave and drop when released.



Always make sure the spare tyre is securely fastened before driving.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Sundaze – Gen1 vehicle **MANUAL**

Additional Information

Tyre size	195/R15
Tyre pressure	50 PSI
Oil type	10W40
Coolant type	Red Coolant (any brand)

Note: **Do not mix coolant colours.** If the coolant in the vehicle is red, use red. If green, use green



Sundaze – Gen1 vehicle MANUAL

Dash warning lights

Warning Light Symbol	Warning Light	Description	What to Do if the Light Comes On
	Brake Warning (Red)	Handbrake engaged or low brake fluid. If with ABS light, brake fault.	Pull over safely & avoid sudden braking. If the light comes on with ABS light, stop immediately & contact Roadside Assistance.
	ABS Warning (Amber)	ABS fault – brakes work without ABS. If with brake light, possible brake failure.	If on alone, drive cautiously & check as soon as possible. If with brake light, stop immediately & call Roadside Assistance.
	Electronic Stability Control (Amber)	Traction control fault; flashing = active, constant = fault.	Drive with caution. Restart engine; if still on, contact Roadside Assistance.
	Electronic Brakeforce (Amber/Red)	The braking system has malfunctioned	You can still drive very cautiously & contact Roadside Assistance.
	Airbag/SRS (Red)	Fault in airbag or seatbelt system.	Contact Roadside Assistance.
	Coolant Overheat (Red)	Engine overheating – possible low coolant or leak.	Stop immediately & contact Roadside Assistance.



Sundaze – Gen1 vehicle **MANUAL**

	Battery Charge (Amber/Red)	Battery not charging.	Contact Roadside Assistance.
	Oil Pressure (Red)	Low oil pressure or high oil temp.	Stop immediately & contact Roadside Assistance.
	Engine Management (Amber)	Fault with engine or emissions.	Continue to destination & then contact Roadside Assistance.
	Immobilizer (Amber)	Anti-theft fault or key battery issue.	Continue driving & contact Roadside Assistance.