

Australia

Gen 2 and 3

Coaster



Vehicle manual.



helphub.jucy.com

Coaster vehicle **MANUAL**

Contents

Description of keys.....	03
Vehicle equipment.....	04
Starting the vehicle	05
Windows & blinds	06
12-volt electrical system	07
Freshwater tank.....	08
Greywater tank.....	09
Portable toilet cassette	10
Portable gas stove	11
Tap & sink.....	14
Fridge	15
Interior Lights	16
USB Chargers.....	17
Luton table	18
Bed	19
Storage	20
Diesel fuel	21
Changing a tyre	22
Safety & Vehicle operational features	22



helphub.jucy.com

01. Description of keys



IGNITION KEY:

Use for:

1. Start your vehicle



helphub.jucy.com

02. Vehicle equipment



FIRE EXTINGUISHER

Each vehicle is equipped with a dry chemical fire extinguisher, meticulously selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements). To deploy the extinguisher effectively, grasp the ring situated atop the bottle, direct the nozzle towards the top of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

*Fire extinguisher is attached to the interior of the vehicle



helphub.jucy.com

03. Starting the vehicle

Gear stick must be in PARK and your foot on the pedal in order for the vehicle to start.



Gear stick in parking mode

The dashboard will display a 'P' indicating that the vehicle is in park.



Gear stick in driving mode

Start the vehicle using the ignition key.

With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating that the vehicle is in drive.

Disengage the hand brake by pulling it down. A red exclamation mark will disappear from the dashboard. To engage the handbrake, pull the handbrake up. A red exclamation mark will appear.



NOTE –

Handbrake is on the left-hand side of the driver seat. Do not forget to disengage the handbrake before you drive.



04. Windows & blinds

WINDOWS

The vehicle is equipped with privacy curtains on the rear windows and in the front cabin.

These blinds can be rolled up when not in use.



To open the windows on board your vehicle, turn the vent handles inwards. Push the window out and click the latch in place. The window has a mosquito net and a sun blackout blind. These can be used separately. To use the mosquito net, pull the white blind down using the handle indents. To use the sun blackout blind, pull the blind up using the handle indents.





05.12-volt electrical system



Your vehicle has two batteries. One in the engine compartment and one in the rear of the cabin. The battery inside the cabin is also called your domestic battery. The engine compartment battery is located under the driver's seat.

The domestic battery operates the water pump, esky & interior lights. The domestic battery is charged by the alternator when the vehicle is being driven.

The 12-volt electrical panel is located on the rear of the vehicle in the kitchen area. To turn it on, switch the power button so the green light is illuminated.

This panel operates the water pump and light and must be turned on at all times to operate any device on the 12-volt system.

IMPORTANT – It is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.



06. Freshwater tank



The freshwater tank is located in the rear of the vehicle, in the kitchen area.



To fill the freshwater tank:

1. Unscrew the "Fresh water only" compartment.
2. Remove the cap from the water inlet.
3. Place the end of the water hose into the tank and connect the hose to the tap to fill the vehicle with fresh water.

Note: Do not use too much pressure as the tank must be vented when filling. In the event of an air bubble, simply remove the hose, reinsert it and fill slowly again. The tank is full when the water starts to overflow from the water inlet.



07. Greywater tank

The grey water holding tank collects wastewater from the kitchen sink.

To empty the greywater tank:

1. Collect the grey water hose from the storage compartment.
2. Connect the hose to the outlet. Make sure it is firmly attached by pulling down the silver levers on each side of the attachment.



3. Place the other end of the hose into the dump station disposal opening.
4. Open the tank by turning the blue lever so it is parallel with the pipe and wait for it to empty.
5. Once the grey water is empty, close the lever & remove the hose and stow away in the storage compartment.

Should the grey water tank become obstructed during your journey, we recommend inserting a hose into the grey water outlet as far as it reaches. Turn on the hose to its highest pressure setting and direct the flow of water into the tank until it reaches full capacity. Once achieved, withdraw the hose, facilitating the flow of grey water. If needed, repeat this process until the obstruction is cleared.



helphub.jucy.com

08. Portable toilet cassette



It is highly recommended to regularly empty the toilet cassette, and it is mandatory to empty and clean it before returning the vehicle to the depot.

After emptying the toilet cassette, rinse it thoroughly and repeat the emptying process. Then, add a toilet chemical along with half to a litre of water.



09. Portable gas stove

The vehicle is equipped with a portable butane gas stove which can be found in the kitchen compartments in a black carry case.

Inside the vehicle, the cooker is to be only used on the kitchen stove but can be used outside on a side table.

The cooker is designed to be used for very short periods – no longer than fifteen minutes at a time.



1. To start remove gas cooker from the black carry case and place on a flat surface.



2. Open cartridge cover and place gas cartridge in.



3. Turn the ignition knob to "OFF" and set the cartridge lock lever to "UNLOAD".

4. Open the cartridge cover, slide the gas cartridge, top end first and with its notch up, in the compartment.




5. Align cartridge collar notch with the locator tab on the gas cooker as per photo.



6. Push and turn the knob to anti-clockwise past the ⚡ position until a click is heard.

Please Note: If the burner fails to light, immediately turn the ignition knob to "OFF" position and restart again.

The flame can be controlled by turning the ignition knob between the "HIGH" and "LOW" position.

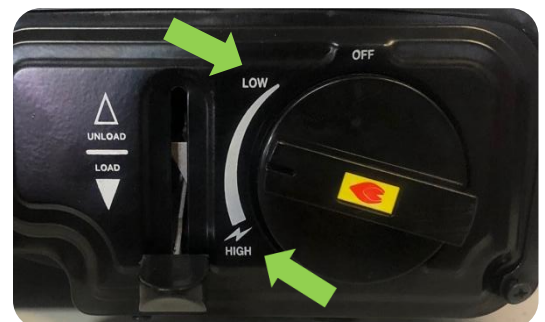



helphub.jucy.com



Turn the ignition knob to “OFF” to shut off fuel supply.

Wait until the flame is fully extinguished before performing the next step.

Raise the cartridge lever to “UNLOAD” and remove the gas cartridge from the compartment.

Do not leave the gas bottle inside the gas cooker when not in use.





12 Tap & sink

The vehicle comes equipped with a water system. To operate the tap, turn on the 12-volt control panel by pressing the power button so the green power button illuminates green. The tap switch also needs to be illuminated green for the tap to work.





13. Fridge

The fridge in your vehicle operates via the 12-volt system. To operate the fridge, switch on the power button so it illuminates green.

IMPORTANT – It is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.





helphub.jucy.com

14. Interior Lights

To operate the cabin lights, turn on the 12-volt control panel by pressing the power button so the green power button lights up green.

The switches for the lights are located in the cabin of the vehicle, on the wall across from the bed.

Flicking the switch upwards illuminates the red light, flicking the switch downwards illuminates the white light.





15. USB Chargers

The vehicle is equipped with four USB power points in the kitchen area and four USB power points in the cabin area.

These run off the 12-volt battery and will only work if the main power button is switched on.





helphub.jucy.com

16. Luton table



To disassemble the table, pull handle 1 out and rotate right.

Clip back in and rotate left: repeat to loosen and remove the tabletop.

Repeat for handles 2 & 3 and remove the table leg.






17. Bed

The vehicle is equipped with one double bed that also serves as the dining area during the day.

To make the bed, follow the below steps:



1. Remove table from the dining area (see Luton table for removal).

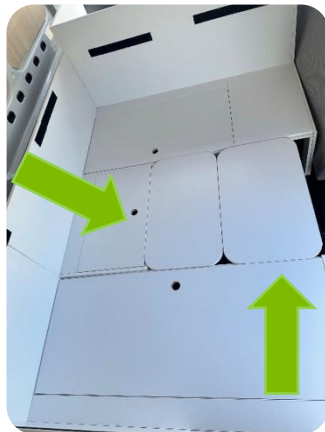

2. Remove all cushions from the dining area. Using the table that was removed in step 1, place the table in the middle of the bed area. In the storage compartment under the bed, there will be another flatbed extension. Place this on the end of the bed (see photo on left)



3. Place cushions back on the bed.



18. Storage

The vehicle has a dedicated storage area under the bed/ dining area, as well as various drawers/ cupboards throughout the vehicle to store personal items.





helphub.jucy.com

19. Diesel fuel & AdBlue

The vehicle accepts diesel fuel only. DO NOT refill the vehicle with any other fuel or fluid. The diesel tank cap is marked with DIESEL on it and can be opened by unscrewing the diesel cap.

The fuel filling location is located next to the passenger door.



Once filled with diesel, place the fuel cap on the inlet and turn the cap to lock it.

IMPORTANT: The vehicle accepts diesel fuel only within the fuel compartment. If you fill the vehicle with unleaded fuel, water or AdBlue within the fuel compartment, please do not start the engine and call JUCY Roadside Assistance immediately.

Your vehicle may need AdBlue depending on the vehicle generation. The difference is seen by the two compartments in the fuel area.

One compartment for Diesel – it's a black cap, and for the AdBlue compartment – it's a Blue cap.

Here is a sample image of a vehicle that **DOES NOT** need AdBlue. It has a black cap only



Below is a sample image of a vehicle that **DOES NEED** AdBlue. It has a blue cap.



If the AdBlue level is low, a warning light or symbol illuminates on the dashboard and a message advises you to top up the AdBlue tank. Please find the nearest fuel station or auto shop which supplies AdBlue and refill the vehicle with AdBlue as soon as possible. Failure to refill the AdBlue tank will result in the vehicle going into limp mode.



helphub.jucy.com

20. Changing a tyre

Prepare the Vehicle:

Stop the vehicle in a safe, flat, and stable area. Turn off the engine and engage the parking brake. Your spare Tyre is located underneath the vehicle at the rear.



Retrieve the Tools: The tools are located in the side compartment on the driver's side step. Remove the cover to access the tools behind as shown in the photo below. It includes: Bolt spanner, Jack, Tow bar



Loosen the Wheel Bolts: Use the bolt spanner and rod to loosen the wheel bolts by one turn.

Position the Jack: Extend the jack slightly and position it at the designated lifting point.

Lift the Vehicle: Raise the vehicle using the jack until the wheel is off the ground.

Take Off the Punctured Wheel: Use the wrench to remove the spare wheel from under the vehicle and free it from its holder.

Install the Spare Wheel: Place the spare wheel, lining up the holes with the pins.

Tighten the bolts by using the bolt spanner and rod - crossing from one bolt to the opposite one.

Lower the Car: Lower the car back down and remove the jack.

Don't forget to:

Tighten the wheel bolts fully.

Put the punctured wheel back in its holder and tighten the knob.

Store the tools back in their bag and place the bag under the passenger seat.



21. Safety & vehicle operational features

Seat Adjustment Guide:

1. Longitudinal Adjustment

- Lift lever (1) to move the seat forward or backward.
- Ensure your arms rest comfortably on the steering wheel when seated.

2. Height Adjustment

- To raise the front of the seat lift lever (4). To lower, push down.
- To raise the rear of the seat lift lever (3). To lower, push down.
- To raise the overall height of the seat lift lever (5). To lower, push down.

3. Backrest Angle Adjustment

- Lift lever (2) and lean backwards.

4. Armrest Adjustment

- To lower the armrest lift to the top position and then push it all the way down. Raise it again to your preferred position.

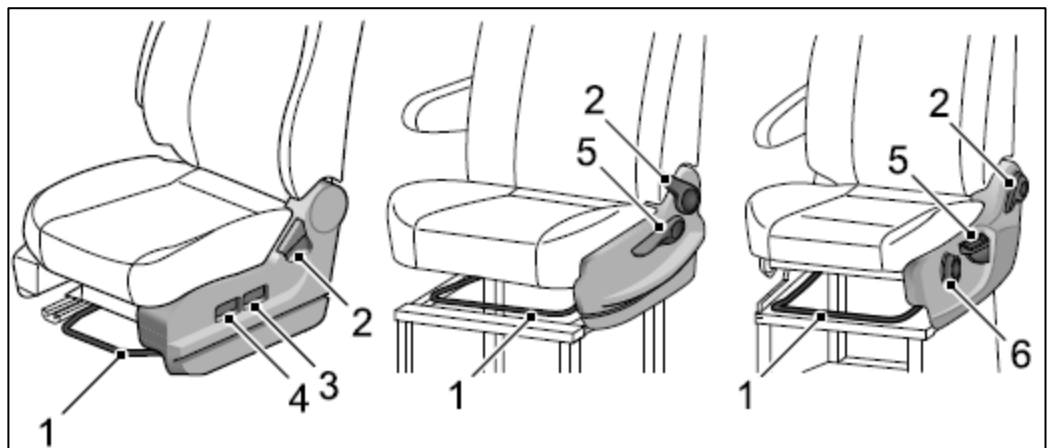


Fig. 1



helphub.jucy.com

Exterior Mirror Adjustment Guide

Depending on the vehicle you are in, the mirror adjustment will be on the **left** or the **right** hand side of the steering wheel.

1. Optimizing the View


- Adjust the outside mirrors to focus on the adjacent lane with slight overlap from the interior mirror's view.

2. Manual Adjustment

- Adjust each mirror manually by moving the glass to achieve the desired position.

3. Power Mirrors

- Turn the switch to L (left) or R (right) to select the mirror to be adjusted. Move the mirror switch towards the front/ rear/ left/ right to adjust the lens to tilt towards up/ down/ left/ right.

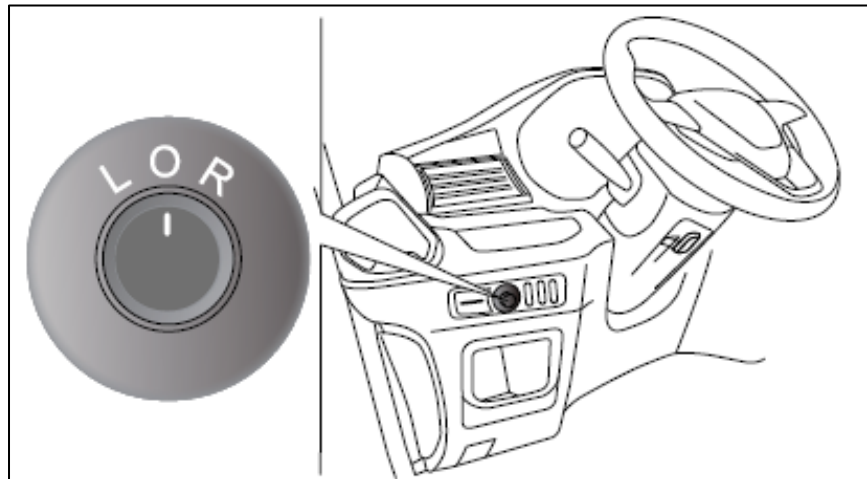




External Lights

The auto function for headlights automatically adjusts your vehicle's lights based on surrounding light conditions. It activates the headlights at dusk, in tunnels, or during low visibility, ensuring optimal safety and convenience without manual intervention.

Depending on your vehicle, you may have the headlights located either attached to the steering wheel or on the main control panel screen.

If you have the headlight controls attached to the steering wheel:

To turn the headlights on, turn the ring of the left stalk to the AUTO position 2 (see diagram below).

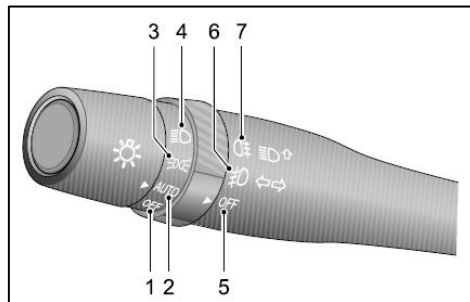

If you have the headlight controls attached to the main control panel screen:

To turn the headlights on, on the screen press the home icon, it should default to an image of the vehicle you can touch the screen where it says "Lamps".



From here the headlight options will appear – we recommend you use "Headlamp AUTO" which allows the headlights to turn on and off with the vehicle detecting if it is nighttime, travelling through a tunnel etc.

