



CLOUDBREAK

Vehicle manual for your Chill'd by JUCY vehicle

Australia, Gen001

jucy.com | October 2026

*Images within this manual are for illustrative purposes only.
Actual vehicle, model, and exterior paint colours may vary.*



TABLE OF CONTENTS

Welcome to your JUCY vehicle.....	3
Before you hit the road	3
Description of keys.....	5
Vehicle safety equipment	5
Dashboard & Controls	6
Starting the vehicle	6
Connect your phone	7
Dashboard warning lights.....	7
Power & Electrical Systems	11
12-volt electrical system.....	11
USB chargers.....	11
Water	12
Fresh water tank.....	12
Greywater	13
Tap and sink.....	13
Using the Kitchen.....	14
Portable gas stove.....	14
Gas Cannister refills.....	17
Fridge	17
Setting up for the night	19
Bed.....	19
Blinds	21
Storage	22
Fuel, Maintenance & Roadside	23
Unleaded fuel	23
Spare Tyre and Tools.....	24
Additional Information	25
Vehicle Return.....	26
Get ready for vehicle drop off.....	26



GETTING STARTED

Welcome to your JUCY vehicle

Before you hit the road

Welcome to your Chill'd by JUCY adventure! This manual is your complete guide to everything you need to know about your vehicle. Please read all sections carefully before your trip begins to ensure a safe and enjoyable experience.



IMPORTANT INFORMATION

Before starting your journey, take a few moments to familiarise yourself with the vehicle and make sure everything is secure. These simple checks will help you enjoy a safe and comfortable journey.

Tip	What you need to know
Secure your belongings	Make sure luggage and personal items are safely stored. Close and latch all cupboards and drawers. Avoid leaving loose items on benches, tables or the dashboard as they may move when driving.
Check the outside of the vehicle	Ensure the connections have been disconnected. Take a quick walk around the vehicle before departing.
Know your vehicle's dimensions	Be aware of the vehicle's height, width and length. Take extra care around low branches, bridges, tunnels, car parks, petrol stations and other areas with restricted clearance.
Allow extra space	Allow additional space when turning, changing lanes, merging and stopping, and maintain a safe following distance.
Keep left	In Australia and New Zealand, we drive on the left-hand side of the road. Take extra care when turning, entering roundabouts and changing lanes.
Take care when reversing and parking	Use your mirrors and reversing camera where fitted, but don't rely on them alone. Check your surroundings carefully and, where possible, have someone outside the vehicle guide you.



Plan your route	Check that your planned route is suitable for your vehicle. Consider vehicle height and road conditions, and don't assume your GPS will account for the dimensions of your vehicle.
Take extra care in regional areas	Regional roads can be narrower, winding or unsealed, with fewer fuel stations and services. Plan fuel and rest stops ahead of time and allow extra time for your journey.
Watch for wildlife	Animals are more active around dawn, dusk and overnight, particularly in regional areas. Stay alert and reduce your speed where appropriate. If an animal enters the road, brake firmly and stay in your lane where it is safe to do so. Avoid sudden swerving.
Be particularly careful at dawn and dusk	Visibility can change quickly around sunrise and sunset, and wildlife may be more active. Reduce your speed, use your headlights as appropriate and remain alert for animals, cyclists and other road users.
Allow for changing road conditions	Drive to the conditions and take extra care on narrow bridges, winding roads, uneven surfaces and in wet or windy conditions.
Check your fuel and mobile coverage	Don't assume the next fuel station or town will be nearby. Plan ahead when travelling long distances and be aware that mobile coverage can be limited in regional and remote areas. Download maps or directions before entering areas with limited coverage.
Be aware of limited services in regional areas	If you travel a long distance from one of our branches, access to vehicle repairs, roadside assistance, parts, and other support may be limited, particularly in remote areas, on weekends and during holiday periods when some repairers may be closed. If you experience an issue, contact us as soon as possible so we can work with you to find the best available solution. <i>Please be patient while we coordinate assistance, as arranging repairs or recovery in regional areas can take additional time and coordination.</i>
Take your time	If you're new to driving a campervan style of vehicle, allow yourself time to become comfortable with its size and handling. Take it easy, leave plenty of space and enjoy the journey.



Description of keys

Ignition Key

Use for:

1. Start your vehicle



Ignition key



Ignition barrel

Vehicle safety equipment

Fire Extinguisher

Each vehicle is equipped with a dry chemical fire extinguisher, selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements). To deploy the extinguisher effectively, grasp the ring situated atop the bottle, direct the nozzle towards the top of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.



Fire extinguisher is attached to the interior of the vehicle



IMPORTANT INFORMATION

Do not attempt to put out a fire if you are in any danger. If you are unable to control the fire, stay away from the vehicle in case of explosion and call emergency services.



VEHICLE CONTROLS

Dashboard & Controls

Starting the vehicle

Gear stick must be in PARK and your foot on the pedal in order for the vehicle to start.



Gear stick in parking mode.

The dashboard will display a 'P' indicating that the vehicle is in park. Start the vehicle using the ignition key.

With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating that the vehicle is in drive.



Gear stick in driving mode.



IMPORTANT INFORMATION

CAUTION – Handbrake is located next to the brake pedal. Press with your foot to engage and disengage. When the brake is engaged, you will hear a continuous beeping noise.



Handbrake disengaged



Handbrake engaged



Connect your phone

1. Connect your phone to the USB-A port using a genuine or certified data cable.
2. Unlock your phone and accept any connection prompts.
3. Select Apple CarPlay or Android Auto icon on the vehicle screen.



USB-A port is located on the lower left-hand side of the centre console, below the climate controls.

 **Apple CarPlay®**

- Compatible iPhone
- iOS 7.1 or later
- Genuine Apple Lightning cable or Apple-certified cable
- Mobile data connection

 **Android Auto™**

- Compatible Android™ phone
- Android 6.0 or later
- Genuine or manufacturer-approved USB data cable
- Android Auto app installed (if required)
- Mobile data connection

 **TROUBLESHOOTING**

If your device does not connect:

- ✓ Ensure you are using a genuine or certified data cable. **Charging-only** cables will **not** work.
- ✓ Confirm the cable is fully inserted into both your phone and the USB port.
- ✓ Unlock your phone and accept all prompts.
- ✓ Disconnect and reconnect the cable.
- ✓ Restart your phone.
- ✓ Ensure mobile data is turned on.
- ✓ Ensure Siri® (Apple) or Google Assistant™ (Android) is enabled.
- ✓ Check that your phone software is **up to date**.
- ✓ Try a different genuine data cable if available.



 **IMPORTANT**

For your safety, complete initial setup while the vehicle is parked.

 Mobile data charges may apply.

 Performance may vary depending on your phone, software version and cable quality.

Dashboard warning lights

Toyota Estima ACR30 – Dashboard Warning Lights Guide

Models this applies to: Crib, Cloudbreak and Crib + 2001 – 2005 Models

It's important to know what each dashboard warning light means and what actions you can take, because you might be able to avoid a breakdown or catastrophic failure which will result in your vehicle being towed and disrupting your holiday.

This guide will give you the facts you need to understand what the different amber and red warning lights on your dashboard mean, should they come on, why they come on, the urgency of the problem and what you should do when you see them.

 
The warning lights on your dashboard follow a simple traffic light color system:

- **Green:** The system is functioning properly or is actively in use.
- **Amber:** There is a malfunction or fault – exercise caution and have it checked at your next convenience, but it is not immediately critical and non-urgent.
- **Red:** A serious and potentially dangerous issue – stop driving as soon as it is safe to do so as this could cause severe damage, costly repairs or compromise safety.



	Brake Warning Also known as the brake system warning light, parking brake warning light or brake fluid warning light. The brake warning light illuminates in red indicating that the handbrake is engaged. If the handbrake is fully released but the brake light remains lit, it indicates low brake fluid levels or if you are driving downhill for a long period of time. If the ABS warning light is also illuminated, this signals that the braking system has malfunctioned and your brakes may not work properly. Can I still drive with my Brake warning light on? Pull over and stop as soon as it's safe to do so – keep your speed low and avoid braking suddenly. If the light goes out after you stopped the vehicle, the problem has cleared. As brake pads wear, fluid levels fall causing the light to come on. If the problem persists please get in touch with Roadside Assistance.
	ABS Warning Also known as ABS (Anti-lock Braking system) is an add-on safety system to prevent the brakes locking and skidding. ABS helps to prevent the wheels from locking when under hard braking. If ABS fails, normal brakes are unaffected, though they operate without ABS. The most common cause for ABS warning light is a damaged wheel speed sensor. Diagnostics and fault code scanning should determine the malfunction. Can I still drive with my ABS light on? If the ABS light comes on by itself you should still have normal, unassisted braking, so it's safe to continue your journey – but keep your distance, take extra care, and get it checked as soon as possible. If it comes on with the red brake warning light it could indicate that the brake system is failing and you should stop straight away and get in touch with roadside assistance.
	EBD Failure Warning The simultaneous illumination of the brake warning light, ABS light and the ESC warning light mean that the EBD system is either unavailable or has malfunctioned. EBD stands for Electronic Brakeforce Distribution and is responsible for distributing brake force to individual wheels, helping to improve the van's braking abilities. Can I still drive with my EBD light on? Yes, however with an EBD failure, unstable braking may occur such as locked rear wheels or the van may swerve when braking. Drive cautiously since the vehicle's brakes need to be serviced right away, please get in touch with roadside assistance.
	Seat Belt Warning When this light goes red it means that at least one element of the seatbelt is not working correctly or there is problems with seat belt / buckle. Wiring under the seats dislodged. Can I still drive with my seatbelt light on? When the seatbelt is clipped in and buckled correctly, this light will go away. Check all seatbelts are buckled and clipped in correctly. It can also come on if a heavy bag is placed on a seat, making the vehicle think that someone is sitting in the seat without a seatbelt on. If you have checked that all seatbelts have been fastened correctly and there is no heavy bag on a seat to cause this and you cannot get it to turn off, please get in touch with roadside assistance as it will need to be sent to a local mechanic for checking/repair. If it is the driver's seatbelt that is causing this issue, you cannot drive the vehicle. The vehicle will need to be towed to nearest branch or repairer to be fixed.
	Engine Coolant Overheating Warning



	Also known as the coolant temperature warning light. This light will come on when the engine is overheating. This could mean that coolant levels are running low, perhaps due to a leak in the system, or it could be a sign of a larger problem, like a head gasket failure. Can I still drive with my engine overheating light on? If this light is red you should stop straight away, as without enough coolant your engine will have irreparable damage. Check that coolant levels are not below the MIN. mark on the reservoir tank. If topping up, allow time for the coolant to cool before removing the cap. Have a look to see if there are any obvious leaks. If you can't see any and the light goes off after topping up then you should be fine to continue your journey. If the light comes back on again after topping up please stop the vehicle and get in touch with roadside assistance.
	Battery Warning Also known as the battery charge light or battery charging system light. If this light comes on when you're driving it indicates that the battery is not charging. This could be due to a problem with your car's electrical system and it could have several causes, such as a faulty alternator, faulty battery, bad electrical connection or damaged cabling. Can I still drive with my battery charging system light on? Yes, however your car will run as normal until the battery is dead but once it is drained your vehicle will not start. If this light comes on, get in touch with roadside assistance.
	Oil Pressure Warning Also known as the low engine oil or low oil pressure light. The oil warning light comes on when either the oil temperature gets too high or the oil level or pressure is too low. If the oil is not lubricating the engine effectively it could lead to expensive or irreparable engine damage, so it's important to act quickly. Can I still drive with my low engine oil light on? When this light comes on you should stop as soon as possible and turn off the engine. Have a look for any obvious oil leaks under the car, and then check the oil levels, topping up if necessary. If the oil levels are fine, then the oil pump may be faulty. In this case get in touch with Roadside assistance. Have a look to see if there are any obvious leaks. If you can't see any and the light goes off after topping up then you should be fine to continue your journey.
	Engine Management Warning Also known as the check engine or ECU warning light. When the engine management light is illuminated it can indicate a number of faults, from minor issues like a broken electrical sensor to a much larger mechanical issue, like a fault with your emission control system or catalytic converter. How long can I drive with my check engine light on? If the check engine light comes on you can continue to your destination, then get in touch with Roadside assistance.
	Oil Change Light When this light goes red it means that the engine is coming due for a service and oil change. Can I still drive with this light on? Of course! This light will not affect vehicle performance and will be booked in for a service when you drop the vehicle back to us. Notify staff when you drop the vehicle back.
	Fuel Filter Warning Light Also known as the fuel filter light. When this warning light comes on, it indicates that the fuel filter is due for replacement or there may be water in the filter, usually from contaminated fuel.



How long can I drive with my fuel filter warning light on? If no other light is on and vehicle performance appears to be fine, then continue on your journey and report to Roadside Assistance at the next opportunity.



POWER & ELECTRICAL

Power & Electrical Systems

12-volt electrical system



ADDITIONAL TIPS

If you are going to use your vehicle off-grid, we recommend you recharge your devices using the USB charging ports when driving, so not to drain the vehicle battery.

Your vehicle has two batteries. One in the engine compartment and one in the rear of the cabin. The battery inside the cabin is also called your domestic battery. The engine compartment battery is located under the bonnet.

The domestic battery operates the water pump, esky & rear interior light. The domestic battery is charged by the alternator when the vehicle is being driven.

You can see the voltage of the 12-volt battery using the voltage reader on the side of the bed



Voltage reader on the side of the bed



IMPORTANT INFORMATION

It is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.

If the 12V battery drops to 11V or below, drive the vehicle to recharge it.

USB chargers

The vehicle is equipped with USB PowerPoints, and they are located either on the side of the bed area or on the vehicle's dashboard (vehicle model dependant). These run off the 12-volt battery.



USB PowerPoints on the side of the bed



WATER

Water

Fresh water tank

The freshwater tank is located in the rear of the vehicle, in the kitchen area. Your fresh water hose is located within the kitchen area storage.

To fill the freshwater tank:

1. Flip up the compartment that says, "Fresh water only". It's located in the kitchen area at the rear of the vehicle.
2. Place the end of the water hose into the tank and connect the hose to the tap. Turn on the tap to fill the vehicle with fresh water.



ADDITIONAL TIPS



We suggest you turn the tap on slowly when refilling.

Do not use too much pressure when refilling the fresh water as the tank must be vented when filling.

In the event of an air bubble, simply remove the hose, reinsert it and fill slowly again. The tank is full when the water starts to overflow from the water inlet.



Greywater

Any water that goes down your sink will come out of the left side of the rear undercarriage of the vehicle. Use the bucket provided to collect the water and dispose of it at an approved dump station.



Tap and sink

The vehicle comes equipped with a water system. To operate the tap, push and pump the handle so the water comes out of the faucet.



IMPORTANT INFORMATION

We ask that you **do not** put food scraps or any items other than liquids into the sink to prevent it from getting clogged in the first instance.

Troubleshooting: My sink won't drain

Tip	What you need to know
My sink won't drain	The most common reason for a sink not draining is due to the grey water tank not being emptied. Try emptying the grey water tank and see if this works. If the grey water tank is empty and your sink still won't drain, the pipe may be blocked. We recommend pouring hot water or baking soda mixed with vinegar down the sink to unblock the pipe.



KITCHEN & APPLIANCES

Using the Kitchen

Portable gas stove

The vehicle is equipped with a portable butane gas stove which can be found in the kitchen compartments in a black carry case.

Inside the vehicle, the cooker is to be only used on the kitchen stove but can be used outside on a side table.



IMPORTANT INFORMATION

The cooker is designed to be used for very short periods – no longer than fifteen minutes at a time. This cooker is not designed for use with pans larger than 200mm.

1. To start remove gas cooker from the black carry case and place on a flat surface.



2. Open cartridge cover and place gas cartridge in.




3. Turn the ignition knob "OFF" and set the cartridge lock lever to "UNLOAD".



4. Open the cartridge cover, slide the gas cartridge, top end first and with its notch up, in the compartment.
5. Open the cartridge cover, slide the gas cartridge, top end first and with its notch up, in the compartment.
6. Align cartridge collar notch with the locator tab on the gas cooker as per photo.



6. Push and turn the knob to anti-clockwise past the ⚡ position until a click is heard.

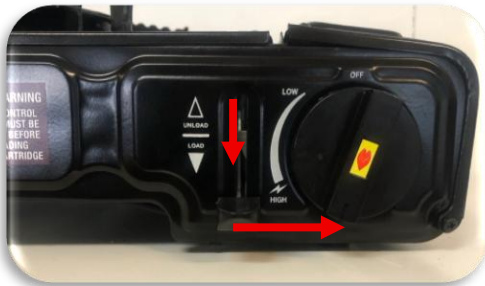

IMPORTANT INFORMATION



If the burner fails to light, immediately turn the ignition knob to "OFF" position and restart again.

The flame can be controlled by turning the ignition knob between the "HIGH" and "LOW" position.



Turn the ignition knob to "OFF" to shut off fuel supply.

Wait until the flame is fully extinguished before performing the next step.



Raise the cartridge lever to "UNLOAD" and remove the gas cartridge from the compartment.



IMPORTANT INFORMATION

Do not leave the gas cartridge inside the gas cooker when not in use. It is not safe to use cooking appliances for comfort heating.



Always have sufficient ventilation when using this appliance by opening a window or door of your vehicle. Do not use in a closed vehicle.

Do not store the cartridges near other flammables, sources of heat or direct sunlight. Do not puncture or incinerate empty cartridges.



Gas Cannister refills

You can purchase new butane gas cannisters for your portable camping stove from Kmart, Bunnings, Mitre 10 and or any other camping or hardware store (such as BCF, Anaconda or Kathmandu).

Sample image of the gas cannisters for reference:



Fridge

The fridge in your vehicle operates via the 12-volt system. To operate the fridge, ensure that it is plugged in and the green light is illuminated on the side of the fridge.



Depending on your vehicle, your fridge may or may not have a temperature control. If it does, you can follow these additional instructions.



Control Panel Functions:

1. **Power button (left)** turns the unit on or off.
2. **Hot / Cold Mode button (Middle)** Switches the unit between cooling (blue indicator) and heating/warming (red indicator) modes.
3. **Temperature / Power Level Adjuster (Right):** LEDs show the active setting or power level (with multiple stages up to a "normal" or high-performance setting)

Adjusting the temperature:

1. Press the **Thermometer/Scale button** (on the far right) to cycle through the power levels.
2. Each press increases the performance intensity by one LED step.



3. **Cooling Mode:** More lit LEDs mean a lower temperature (cools down to a maximum of **27°C below ambient temperature**).
4. **Heating Mode:** More lit LEDs mean a higher temperature (heats up to a maximum of **+65°C**)

Switching Modes Hot and Cold:

1. Press the **Thermometer/Scale button** (on the far right) to cycle through the power levels.
2. Each press increases the performance intensity by one LED step.
3. **Cooling Mode:** More lit LEDs mean a lower temperature (cools down to a maximum of 27°C below ambient temperature).
4. **Heating Mode:** More lit LEDs mean a higher temperature (heats up to a maximum of +65°C)



IMPORTANT INFORMATION

It is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.



SLEEPING & LIVING

Setting up for the night

Bed

The vehicle is equipped with 1 double bed that also serves as the dining area & back seats during the day.

Night time set up

1. Pull the black lever up that is located under the front seats. Move the two front seats forward as far as they will go.



2. Pull the grey lever UP, this is located on the right-hand side of the driver's seat and left-hand side of the passenger seat. Once you have pulled the lever up the chair will bend forward as far as it will bend.



3. Unhook the black bungy cord / fabric toggle.



4. Pull both tabs towards you, so the rear chairs are bent slightly forward. Bottom tab pull UP, this will move the rear chair back as far as it will go.



5. Pull out the top cushion as highlighted. Place top cushion on the rear chairs, slide the middle part of the bed to connect to the rear.



6. Once you have completed Step 4, 5 & 6 bed should look like the photo above.



7. Lower the front bed side down to connect to the middle bed part.



8. Bed is flat and secure, ready to use.



Daytime set up

The pole and tabletop are located under the bed. Place the pole into the hole on the floor and place the tabletop onto the pole.



Driving set up

Ensure the table is stowed away for driving and the bed is put away in its original position.



Blinds

The vehicle is equipped with privacy curtains on the rear window, side windows and between the front cab and the back cab.

These blinds can be rolled up when not in use.



Storage

The vehicle has a dedicated storage area under the bed to store personal items and linen or pillows when not in use.



FUEL, MAINTENANCE & ROADSIDE

Fuel, Maintenance & Roadside

Unleaded fuel

The vehicle accepts unleaded fuel only. DO NOT refill the vehicle with any other fuel or fluid. The fuel tank cap is marked with "Fill me up with 91" on it and can be opened by unscrewing the cap. The fuel filling location is located on the passenger side of the vehicle.

Once filled with unleaded fuel, place the fuel cap on the inlet and turn the cap to lock it.



IMPORTANT INFORMATION

The vehicle accepts unleaded fuel only. If you fill the vehicle with diesel, water or AdBlue, please do not start the engine and call JUCY Roadside Assistance immediately.



Spare Tyre and Tools

The spare tyre is located underneath the rear of the vehicle. Ensure the jack is placed under the recommended jacking point to access the spare tyre.



The tools to use to change the tyre are located inside the kitchen cupboard in the rear, behind the plastic cover against the wall on the left.



You will need to pull the plastic cover off to access the tools behind it.





IMPORTANT INFORMATION

If you do change your tyre whilst on the road with us, please call us to let us know so that we can ensure our vehicle maintenance team are notified to replace the spare tyre when you return your vehicle for the next customer.

Additional Information

Type	Detail
Tyre Size	215/60R 16
Tyre pressure	40 PSI
Oil type	10W40
Coolant type	Red Coolant (any brand)
Car Battery	55D23L SMF



IMPORTANT INFORMATION

Service stations may not have the correct oil type for our fleet.
It is recommended to visit a mechanic who will most likely have the correct oil type you need to purchase if an oil top up warning comes on.



VEHICLE RETURN

Vehicle Return

Get ready for vehicle drop off

Please return your vehicle at the time listed in your booking confirmation.



IMPORTANT INFORMATION

Sorry, no after-hours drop-offs; we want to make sure every vehicle is checked in by our friendly team so you get the best send-off.

Before you say goodbye to your vehicle

- Top up the fuel to full.
- Remove all your items, including any food or gear from cupboards, drawers, or storage.
- Empty your waste water.
- Tidy up the vehicle — a quick clean, dishes done, and rubbish taken out.
- Then just hand the keys back to our friendly team and you're all set!

